


SCALE : N.T.S.



- NOTES:**
- 1). THE WORK SHALL CONSIST OF INSTALLING A SANDBAG DIKE FOR THE PURPOSE OF EROSION CONTROL WHEN CONSTRUCTION ACTIVITIES TAKE PLACE WITHIN THE STREAM CHANNEL SUCH AS BANK STABILIZATION OR BRIDGE ABUTMENT CONSTRUCTION.
  - 2). THE SANDBAG DIKE SHALL BE INSTALLED AT THE UPSTREAM LOCATION FIRST.
  - 3). THE DIKE SHALL BE A MINIMUM OF 1.5 FEET HIGH AT THE TOP OF THE DIKE, OR A ONE YEAR STORM, OR EQUAL WITH THE TOP OF BANK, WHICHEVER IS LESS.
  - 4). ALL DEWATERING OF THE DISTURBED AREA SHALL BE PUMPED TO THE SPECIFIED DEWATERING DEVICE PRIOR TO RE-ENTERING THE STREAM.
  - 5). THE SPILLWAY SHALL BE SIZED TO PASS A (1) ONE YEAR STORM EVENT PEAK FLOW.
  - 6). THE PIPE, WHEN UTILIZED, SHALL BE SIZED TO PASS THE STREAM BASE FLOW.

**PLAN SYMBOL**

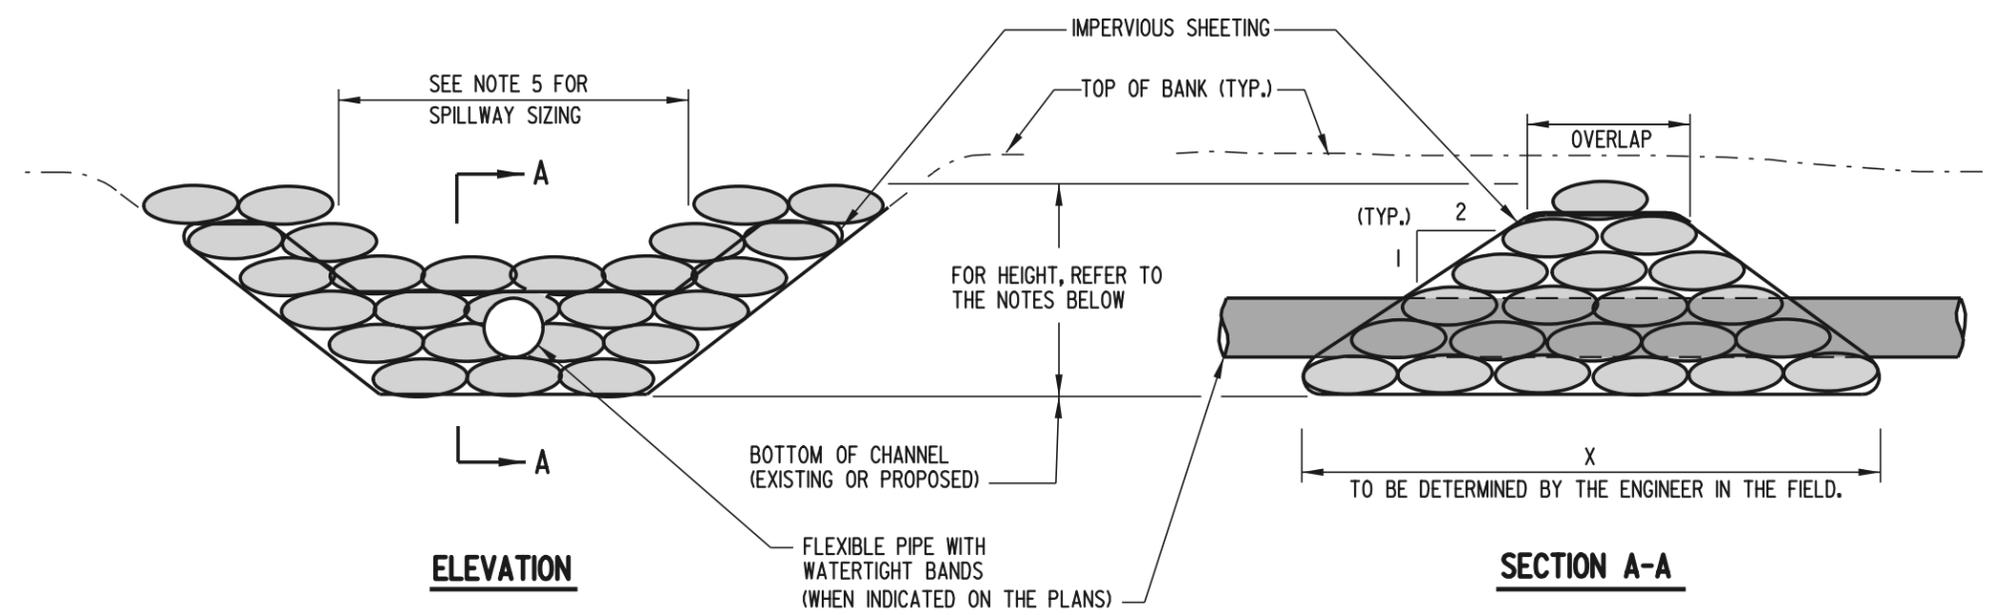